

BreezeMaxx Bladeless Fan

 


Please read this manual carefully before using the product and keep it properly.

Applicable models: 82235

1 Product introduction

Thank You for purchasing the BreezeMaxx Bladeless Fan

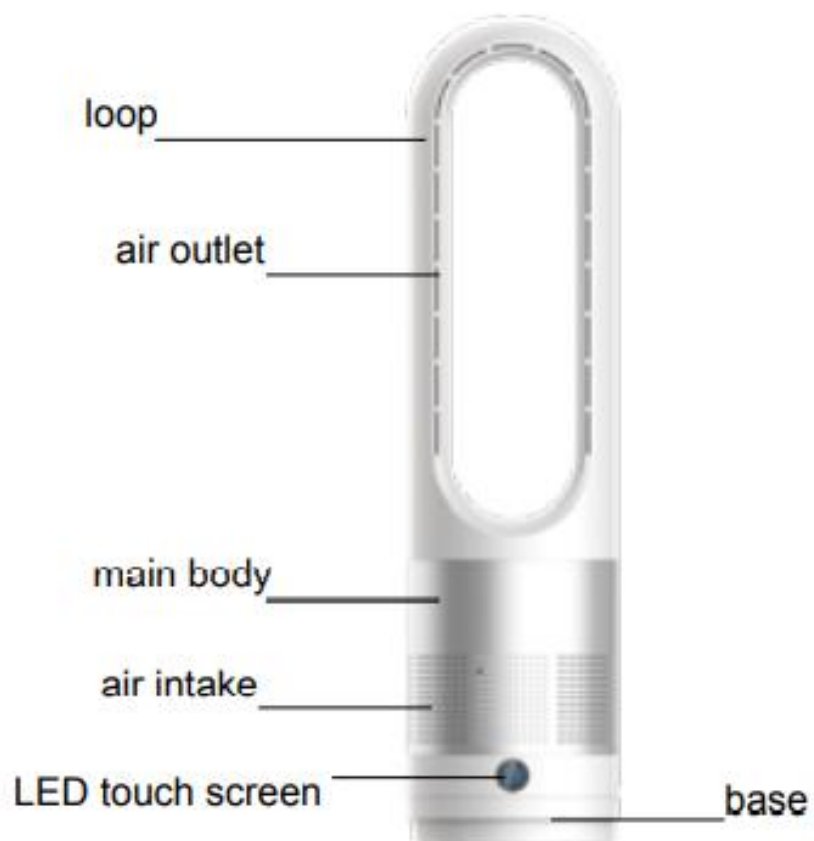

rating label

■ IMPORTANT SAFETY INSTRUCTIONS



WARNING

In order to avoid fire, electric shock and personal injury, please be sure to follow these requirements, otherwise please follow the relevant national and local electrical regulations.

IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING

THE FAN AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has a pacemaker or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

WARNING

These warnings apply to the appliance, and also where applicable to all tools, accessories, chargers or mains adaptors.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Ensure the fan is switched off from the supply mains before removing the guard.
5. This product is for indoor use only, not for outdoor use.

6. Do not handle any part of the plug or appliance with wet hands.
7. Do not operate any appliance with a damaged cable or plug. Discard the appliance or return to an authorized service facility for examination and/or repair. If the supply cable is damaged it must be replaced by Seller service agent or similarly qualified person in order to avoid a hazard.
8. If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Helpline.
9. Do not stretch the cable or place the cable under strain. Keep cable away from heated surfaces.
10. Do not run cable under carpeting. Do not cover cable with throw rugs, runners or similar coverings. Arrange cable away from traffic area and where it will not be tripped over.
11. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
12. Do not put any object into openings or the inlet grille. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
13. Do not use any cleaning agents or lubricants on this appliance. Unplug before cleaning or carrying out any maintenance.
14. Always carry the appliance by the base, do not carry it by the loop amplifier.
15. Turn off all controls before unplugging. Unplug before connecting any tool or accessory.
16. To avoid a tripping hazard wind the cable when not in use.
17. Do not use near furnaces, fireplaces, stoves or other high temperature heat sources.
18. Do not use in conjunction with or directly next to an air freshener or similar products.
19. Choking hazard - This remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once.

READ AND SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE
ONLY

Do not pull on the cable.

Do not store near heat sources.


Do not use near naked flames.

■ WARNING



<p>Please use the appliance at the voltage specified on the nameplate</p> <ul style="list-style-type: none">• the reason for fire and electric shock 	<p>Please use the appliance at the voltage specified on the nameplate</p> <ul style="list-style-type: none">• the reason for fire and electric shock  <p>⊘ Forbidden</p>
<p>Take the plug when you plug it in, and actually plug it in</p> <ul style="list-style-type: none">• If the insertion is not complete, it may be the cause of electric shock, heat, fire, etc. 	<p>Be sure to remove the plug from the socket when maintaining</p> <ul style="list-style-type: none">• the reason for electric shock and injury. 
<p>Please do not use wet hands on the plug and operation panel.</p> <ul style="list-style-type: none">• the reason for electric shock 	<p>When pulling out the plug, do not pull out the power cord but pull out the plug</p> <ul style="list-style-type: none">• There may be an electric short circuit and fire 
<p>It must not be modified, and no one other than the maintenance technician can disassemble it.</p> <ul style="list-style-type: none">• If repairing, please go to the store where you purchased. 	<p>Dust the plug regularly.</p> <ul style="list-style-type: none">• Dust accumulation, due to moisture, will make poor insulation, is electric shock, heat and fire 

 ■ PRODUCT INFORMATION

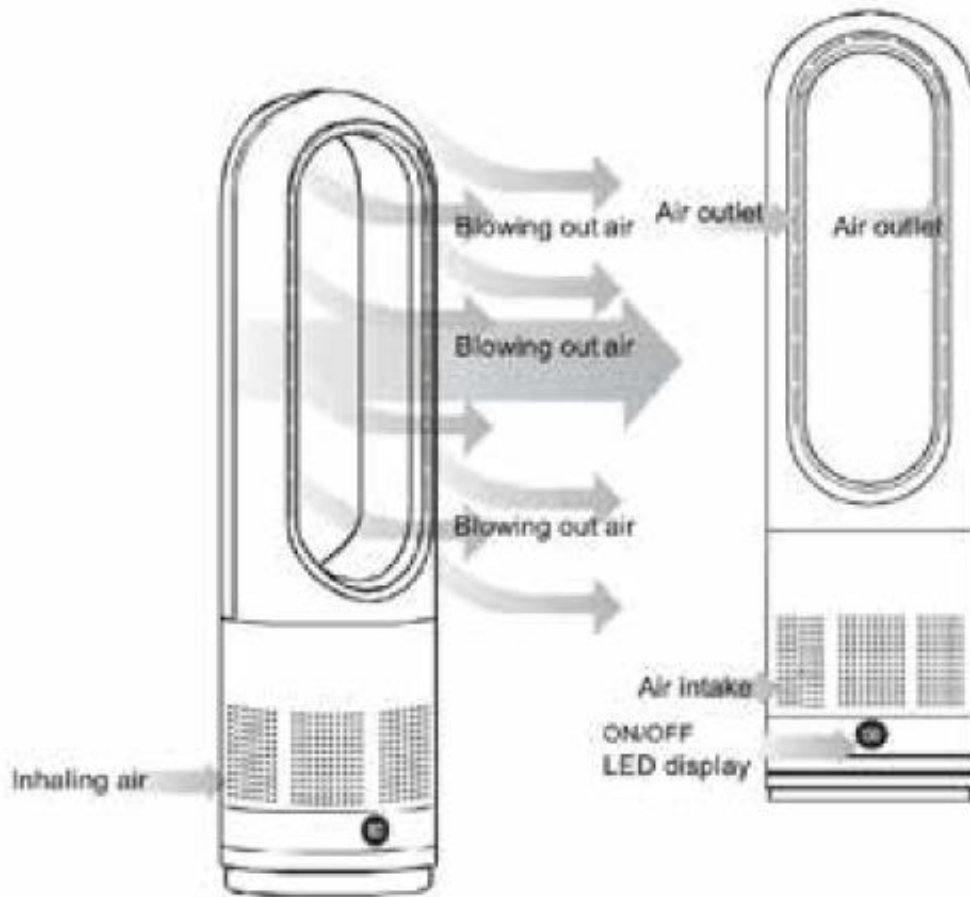


■ FUNCTIONAL SPECIFICATIONS

- The bladeless fan will beep and the LED display will show “00” to enter the standby mode.
- The fan has 8 speed levels.
The default level is level 5 when the fan is turned on for the first time.
- If the fan is in standby mode without the power being off, the level position will be the same as to when it was turned off.
- If the fan is not powered off when in standby mode, the level will be the same when it is turned on again;
- The touch panel has the function of turning the fan on/off and to adjust the speed
Press the button once to turn it on and and keep pressing to adjust the speed.
Press and hold for 3 seconds after turning on the fan. After hearing the beep, the fan begins to rotate. Press it for 3 seconds to turn off the rotating
Press and hold for 5 seconds to turn off. Wait for the second beep.

■ REMOTE CONTROL OPERATION

- ON/OFF: In standby mode, press the power button to turn on the fan. After pressing the button again, the fan slows down and stops to enter the standby mode.
- Wind speed + : while the fan is on, press the wind speed “ + ” button to increase the speed levels, the maximum level is 8.

 - Wind speed - : while the fan is on, press the wind speed “ - “ button to decrease the speed levels, the minimum level is 1.
- Oscillation: While the fan is on, press the oscillation button, the fan will start rotating and press it again and the fan will stop rotating.
- Timing: While the fan is on, press the button to enter the timing mode. The LED displays the corresponding timer in 1 hour intervals up to 8 hours. When the timer is activated the number will blink on the display to show the timer is on. To exit the timer turn the unit on and off.

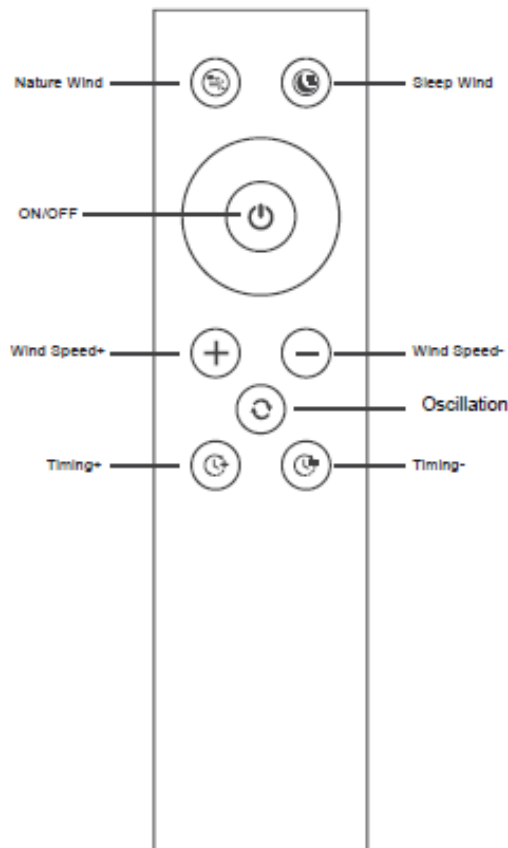

■ Troubleshooting Guide

- When an issue occurs, please investigate the following points
- Please follow the guide below

1 It does not work when plug in the power.

- please recognize whether the plug is really into the socket
- if the power button is pressed, whether the display screen is on or off; 2 air volume weak
- if the air inlet/outlet is blocked, please remove the blockage.
- whether the air volume is adjusted to strong level 3

The remote control cannot be operated

- Is the battery drained? Is the battery placed incorrectly?

4. Unable to operate normally after power failure

 
- Plug out and plug it in again 5

when there is a bad smell

- it is possible that parts are damaged. Please stop operation.

■ Cleaning and Maintenance

- Be sure to unplug the plug when performing maintenance. Please do not use a wet hand to pull the plug. Inadvertent movement may result in injury and electric shock.
- When cleaning, please do not touch water, splash water, there may be electric shock, short circuit
- In the case of the unit being dirty, it can be wiped with a damp cloth containing a neutral detergent. It is easier to decontaminate when using a neutral detergent, wipe the water-containing cloth completely, then use a dry cloth wipe.
- Please make sure that there is no build-up of dust as this may affect the performance of the product.
- You could also use a vacuum cleaner to remove the dust.
- If it is used for a long time, there will be dust and moisture may accumulate between the plug and the socket, which may cause fire. Please pull out the plug and wipe it with a dry cloth.
- If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer.

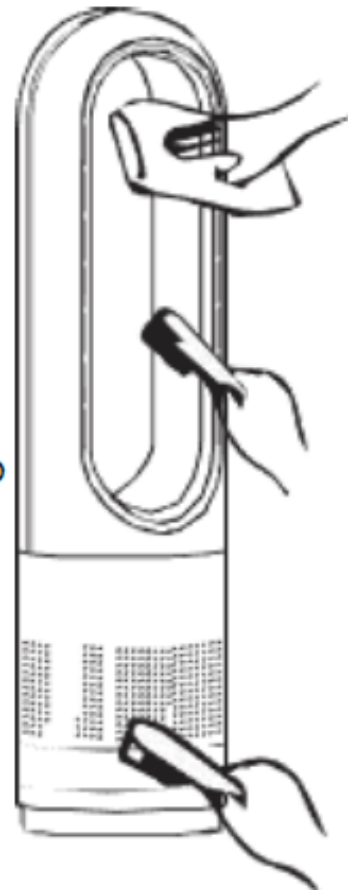

■ Storage

- Put the fan into nylon bag and foam after cleaning to store
- The remote control and other accessories can be stored in a box in a dry place.